

Deluxe Umbrellas

Follow this step by step guide for perfect Deluxe Umbrella assembly.



Tools Required:
1 x Screw Driver/Drill
1 x 10mm Socket head & Spanner
8x Nylon Stoppers

NB: the frame comes assembled WITHOUT your canopy for easy reassembly




1

Lay the canopy on a flat surface and open it up so that you can see the inside of the peak.



2

Place the frame so that the tip sits inside the peak. Fold back the canopy so that each corner is within reach of a rib end.

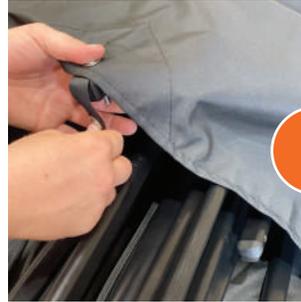


3

Holding the tab with one hand, use your other hand to place the bolt through the canopy eyelet and into the hole in the rib.



4

Wrap the tab under the rib end and push the bolt further so that it goes through this tab eyelet.

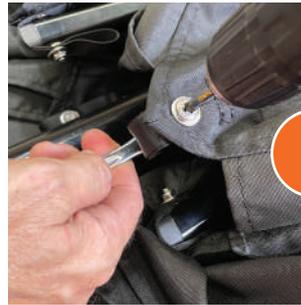

5

Place the nut on the end of the bolt and hold in place with pliers. Use a screw driver/drill to tighten the bolt. Repeat on each rib.



!

This doesn't apply to the 3m Umbrellas - they have 1 single pole.


DO NOT place bottom pole in base and try to screw top pole standing up. There is a high risk of cross-threading the poles.



6

For 2m and 2.4m Umbrellas - follow this step. Skip to 7. for 3m Umbrellas

Ensure the umbrella is lying down. Screw bottom pole into top pole before placing in the base when assembled.

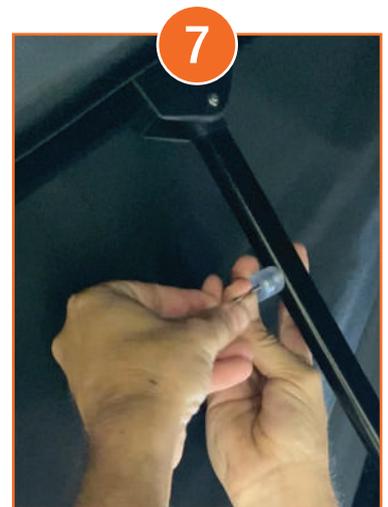

7

Stand your umbrella up, in the base and start adding on the Nylon stoppers.

!This step is important to avoid rib damage!