


# Wind Barriers

Follow this step by step guide for perfect Wind Barrier assembly.

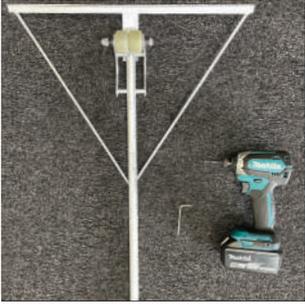

**Tools Required:**  
1 x Stretcher Tool  
1 x Hex key/Hex Drill attachment

NB: the frame comes assembled  
WITHOUT your insert for easy reassembly




1

Set the wind barrier frame face down on a clean flat work bench and remove the bottom and two side sail tracks using an Hex key or 4mm hex head drill bit.



2

Next, insert all guide rods into the ends of the wind barrier insert.

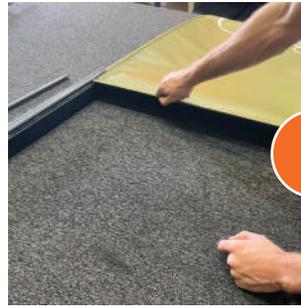

3

Guide the skin into the top sail track, ensuring the back (side with the excess around the stitching) is facing out, as this will be the back side of the wind barrier



4

Slide the remaining sail tracks onto each edge of the skin.




5

Using the stretcher and drill, loosely attach the lower sail track to the frame.



6

Repeat step 5 for the two side sail tracks. The final sail track will give the most resistance. Use the stretcher to pull the skin tight and apply screws.

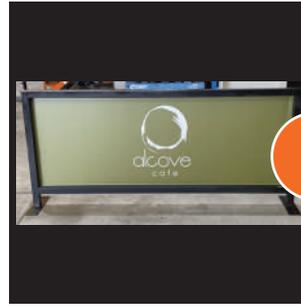

7

Once the skin is in place, tighten all screws. To set up, add your wind barrier feet.